

PRODUCT- JBA RECESSED AIR OUTLET AND SWITCH MOUNTING PLATE


PART NUMBER- JBA-CB904/905

ESTIMATED FIT TIME- 30 MINS

IMPORTANT NOTES

- READ INSTRUCTIONS CAREFULLY PRIOR TO FITMENT
- ENSURE 567 THREAD SEALANT IS APPLIED TO ALL AIR THREADS INSTALLED
- TJM NITTO FITTING NOT INCLUDED (PURCHASED SEPERATLEY FROM TJM P/N 013COMPPF01)

KIT CONTENTS

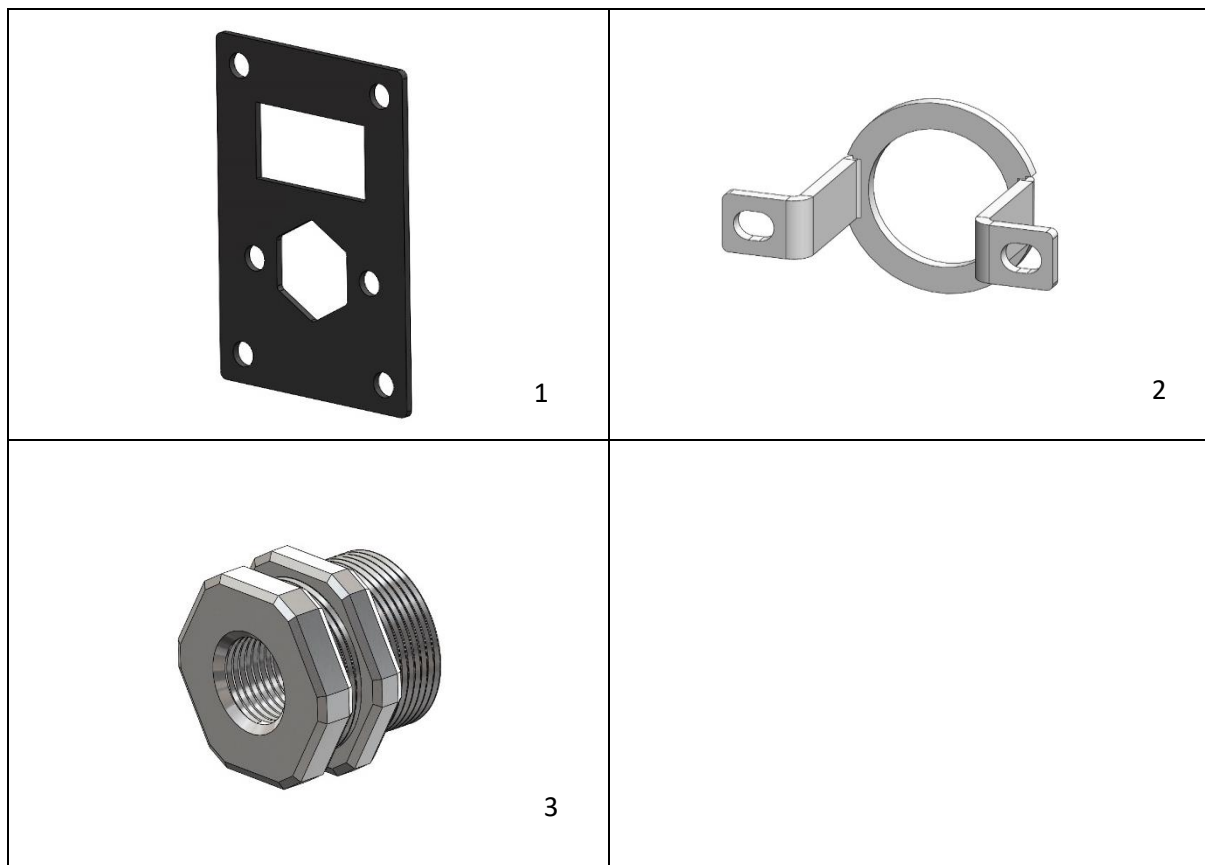

ITEM	DESCRIPTION	PART NO.	QTY
1	JBA RECESSED AIR AND SWITCH MOUNT PLATE	10-CB904/905	1
2	RECESSED MOUNT HOUSING BRACKET	10-CB101B	1
3	BULKHEAD FITTING AND NUT	JB-CB103	1




STEP 1 PLACE THE MOUNTING PLATE IN THE DESIRED LOCATION AND MARK THE 4 HOLES AND OUTLET LOCATIONS AS SHOWN.



STEP 2 MARK OUT A SQUARE AROUND THE SWITCH AND AIR OUTLET AND ADD 3-4MM FOR CUTTING GUIDE.




STEP 3 DRILL OUT THE 4 OUTER HOLES (CAN BE DRILLED TO 5-6MM FOR ANY ADJUSTMENTS AND DRILL A HOLE IN EACH CORNER OR THE MARKED CUTTING GUIDE. CUT OUT THE CARPET TO MAKE THE NEXT STEP EASIER.

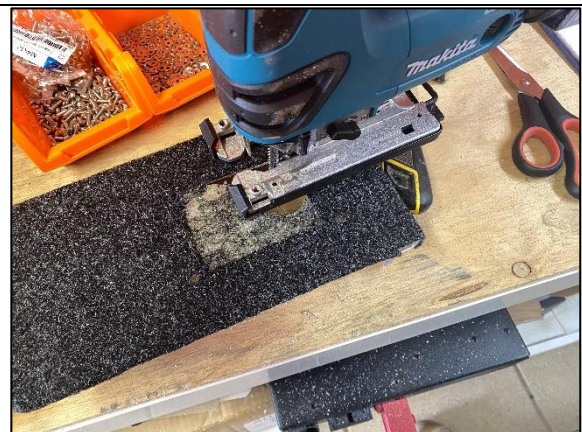

STEP 4 CUT OUT THE INNER SECTION PREVIOUSLY MARKED AS SHOWN.



STEP 5 CLEAN UP ANY SWARF AND DEBUR THE EDGES OF THE HOLE CUT.

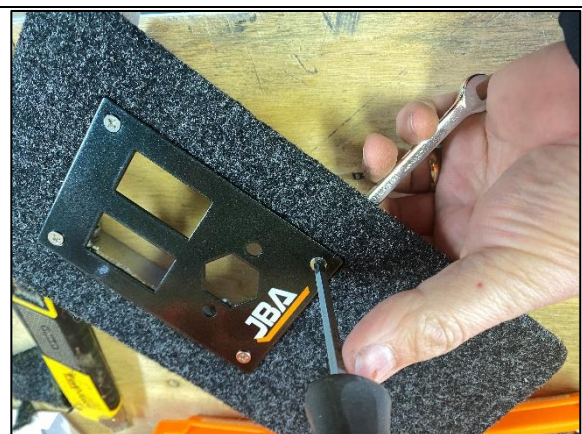


STEP 6 ATTACH THE MOUNTING PLATE USING M4 X 16 CSK SCREWS AND FLANGED NYLOC NUT.




STEP 6 REMOVE THE NUT FROM THE JBA-CB103 BULK HEAD AND FIT THE TJM NITTO FITTING (NOT SUPPLIED BY JBA) TO BULKHEAD. ENSURE FLAT FACES ALIGN AS SHOWN.



STEP 7 INSTALL THE JBA-CB101B RECESSED HOUSING BRACKET USING M4 X 12 CSK SCREWS AND FLANGED NYLOC NUTS AS SHOWN.

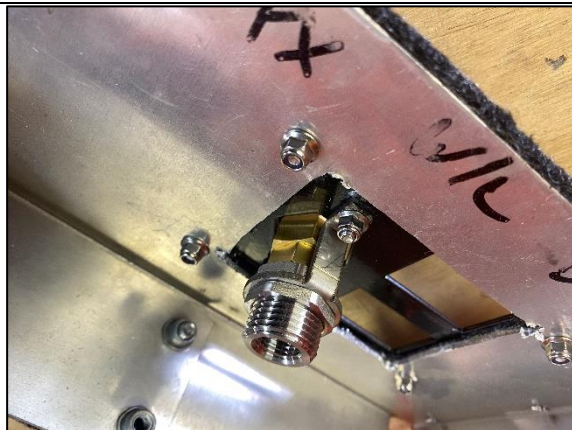

STEP 8 INSERT PRE ASSEMBLED BULKHEAD AND NITTO FITTING FROM STEP 6 INTO THE HOUSING BRACKET AND TIGHTEN THE NUT FROM BEHIND AS SHOWN.

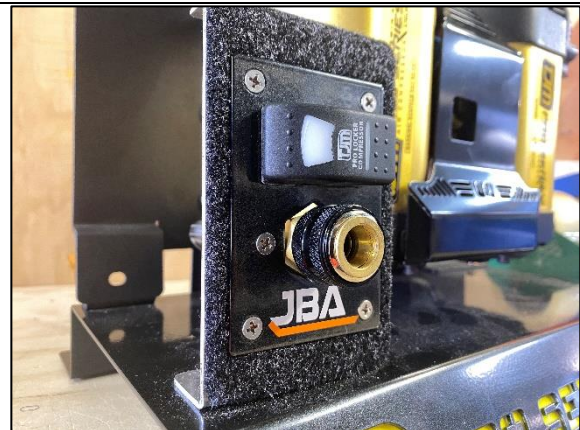

STEP 9 FIT SWITCH AND FINISH THE INSTALL.