

INSTALLATION INSTRUCTIONS

PRODUCT- TJM SINGLE COMPRESSOR MOUTING BRACKET (NO TANK)

VEHICLE- 200 SERIES LANDCRUISER 2007+


PART NUMBER- JBA-CB201, JBA-CB201KIT1

ESTIMATED FIT TIME

- REMOVAL AND REFITMENT OF SEAT AND INTERIOR PANELS	60 MINS
- REMOVAL OF DRAWER SYSTEM (IF REQUIRED)	60-90 MINS
- PREPERATION AND MOUNTING OF COMPRESSOR AND BRACKET	60 MINS
- ELECTRICAL WIRING AND PLUMBING OF AIR OUTLETS	90-120MINS

IMPORTANT NOTES

- READ INSTRUCTIONS CAREFULLY PRIOR TO FITMENT
- ENSURE 567 THREAD SEALANT IS APPLIED TO ALL AIR THREADS INSTALLED
- REFER TO TJM COMPRESSOR INSTALLATION INSTRUCTIONS FOR WIRING SPECIFICATIONS

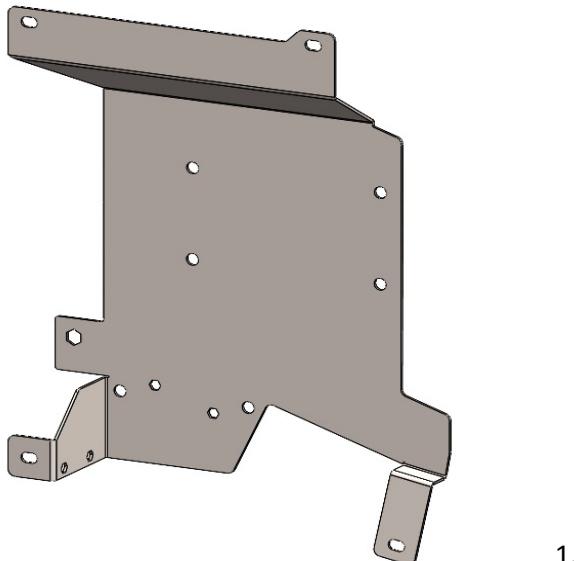


KIT CONTENTS

ITEM	DESCRIPTION	PART NO.	QTY
1	200 SERIES SINGLE COMPRESSOR BRACKET	10-CB201A	1
2	M6 HEX SERR FLANGE NUT ZY	N24 06ZY	2
3	M6 x 20MM SEMS ASSMEMBLY Z/Y	B48 0620ZY	3
4	M8 X 16MM HEX HEAD SET SCREW GR 8.8 316 S/S	X07 80168.8316	4
5	5/16 X 3/4 X 18G FLAT WASHER GR 304 S/S	X79 082018G304	8
6	M8 NYLON INSERT LOCK NUT GR 304S/S	X53 8304	4
7	10MM2 6MM STUD FLARED ENTRY CABLE LUG	57120	2
8	20MM HEAT SHRINK RED 6.4MM	ACX1275	2

INSTALLATION INSTRUCTIONS

OPTIONAL KIT PARTS


JBA-CB201QAS QUARTER PANEL AIR/SWITCH OUTLET BRACKET

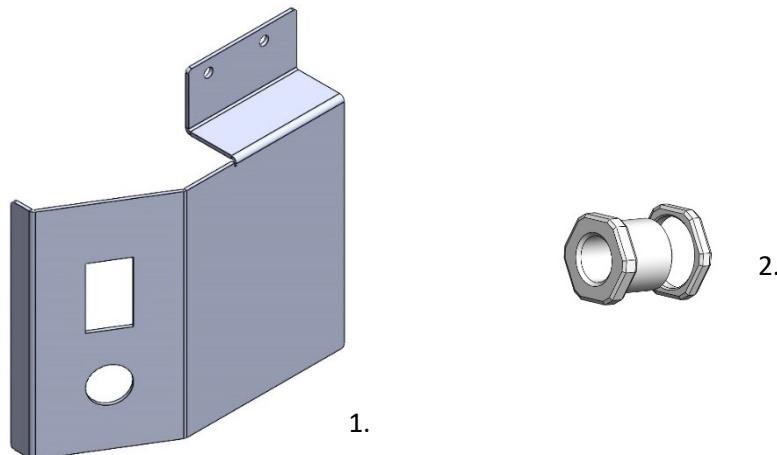

ITEM	DESCRIPTION	PART NO.	QTY
1	200 SERIES SINGLE AIR/SWITCH BRACKET	10-CB201QAS	1
2	JBA COMPRESSOR BULK HEAD AND NUT	JBA-CB103	1
5	M4 X 12 SEMS PAN Z/S	279199	2

INSTALLATION INSTRUCTIONS

1. PREPARING THE VEHICLE

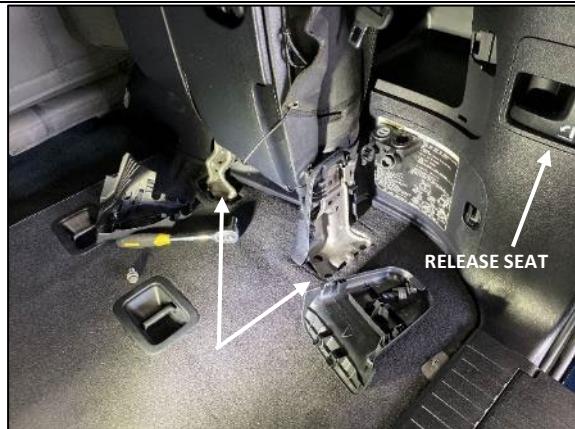

STEP 1.1 REMOVE THE FRONT AND REAR PLASTIC COVERS AND REMOVE CAPTIVE BOLTS USING 14MM SOCKET. RELEASE SEAT AND REMOVE FROM VEHICLE.



STEP 1.2 REMOVE REAR PLASTIC TRIM. LEVER FROM REAR OF PART AND PULL UP FROM EITHER LEFT OR RIGHT SIDE AND WORK ACROSS THE PART.



STEP 1.3 REMOVE REAR RETAINING PIN. PRESS THE CENTRE DOWN AND LEVER CLIP OUT.



STEP 1.4 REMOVE 3RD ROW SEAT BELT. REMOVE PLASTIC COVER ON SEAT BELT BOLT AND REMOVE BOLT USING 14MM.

INSTALLATION INSTRUCTIONS



STEP 1.5 FOLD DOWN SECOND ROW OF SEATS AND REMOVE SEAT BELT BOLT USING SAME TECHNIQUE AS STEP 4.



STEP 1.6 REMOVE THE PLASTIC COVER USING A SMALL FLAT BLADE SCREWDRIVER EXPOSING 10MM BOLT. REMOVE BOLT AND COVER.



STEP 1.7 REMOVE TRIM PULLING UP FROM FRONT TO REAR.



STEP 1.8 REMOVE PANEL. START AT THE REAR OF THE VEHCILE PULLING AWAY THE RUBBER TRIM (BE CAREFUL OF THE BLACK GREASE). GENTLY POP CLIPS BY PULLING AND MOVE FROM FRONT TO REAR OF VEHCILE. CHECK FOR ANY CLIPS THAT MIGHT HAVE REMAINED IN VEHCILE, PRY LOOSE AND PUT BACK IN PLASTIC PANEL FOR RE-INSTALLATION LATER.

INSTALLATION INSTRUCTIONS



STEP 1.9 REMOVE PLASTIC PANEL FROM VEHICLE, FLIP OVER AND REMOVE THE STORAGE PANEL USING PHILLIPS HEAD DRIVER.



STEP 1.10 REMOVE X 2 PLASTIC LOOM RETAINERS. SQUEEZE FROM BEHIND (FRONT TO BACK) AND PULL AT THE SAME TIME TO REMOVE. THESE CLIPS CAN BE DIFFICULT TO GET OUT AND WONT BE USED LATER SO USE APPROPRIATE FORCE AS REQUIRED, JUST ENSURE STEEL BODY HOLES ARENT BENT.

INSTALLATION INSTRUCTIONS


2. PREPARE THE WIRING HARNESS, FUSE AND COMPRESSOR



STEP 2.1 ATTACH ANS-H FUSE HOLDER SUPPLIED IN TJM COMPRESOR USING M4 X 12 PAN HEAD SCREWS AS SHOWN.



STEP 2.2 ROTATE THE TJM COMPRESSOR 90 DEGREES AS SHOWN ENSURING THE POWER WIRES ARE AT THE BOTTOM.

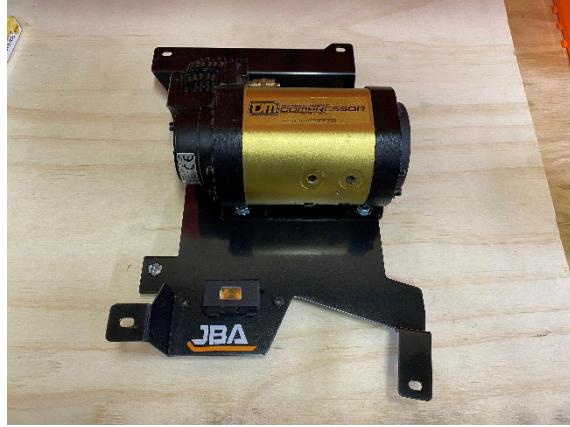

STEP 2.3 ATTACH THE COMPRESSOR TO THE JBA BRACKET AS SHOWN USING M8 X 16 BOLT WITH WASHER UNDER THE HEAD.



STEP 2.4 FASTEN FROM THE REAR USING STRAPS PROVIDED IN TJM COMPRESSOR, M8 WASHER AND NYLOC NUT AS SHOWN.




STEP 2.5 INSTALL TJM PRESSURE SWITCH TO THE BOTTOM 1/8" OUTLET AS SHOWN.




STEP 2.6 INSTALL THE TJM RELAY USING M6 X 20 SEMS ASSEMBLY TO CAPTIVE NUT ON BRACKET AS SHOWN.

INSTALLATION INSTRUCTIONS

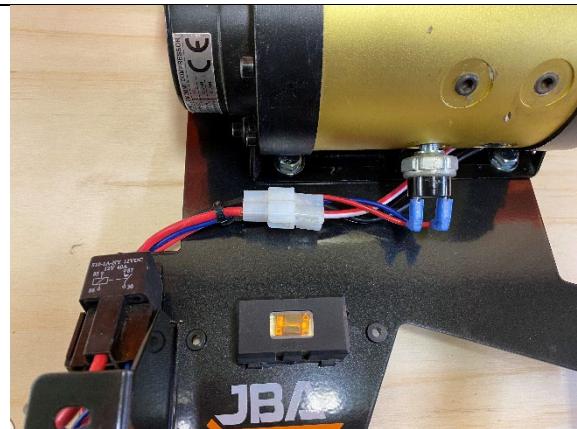

STEP 2.7 CONNECT THE MAIN POWER WIRE AND PRESSURE SWITCH WIRES.

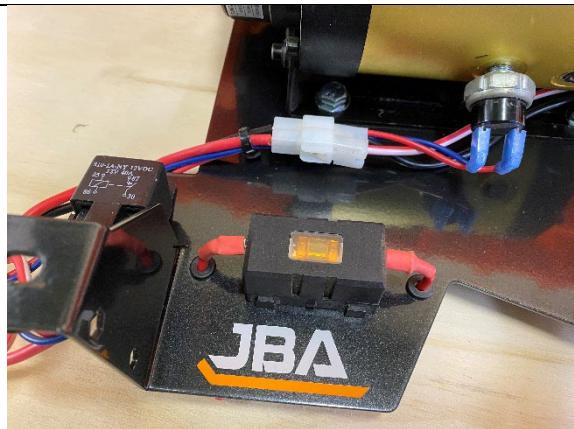

STEP 2.8 FEED POWER WIRE THROUGH GROMMETS, HEAT SHRINK AND TERMINATE AS SHOWN.




STEP 2.9 NEATLY FOLD THE LOOM AND CABLE TIE AS SHOWN LEAVING ABOUT 30-40CM OF THE MAIN POWER/NEG WIRE AND THE RED/YELLOW ACC POWER/BLUE WHITE DASH WIRES OUT AS SHOWN.

INSTALLATION INSTRUCTIONS


OPTIONAL STEPS 2.1A INSTALLING SWITCH AND AIR OUTLET INTO QUARTER PANEL JBA-CB201QAS



STEP 2.13 ATTACH THE COMPRESSOR TO THE BRACKET USING THE M8 X 16 HEX SET SCREWS ENSURING A WASHER IS UNDER THE HEAD OF EACH SET SCREW.

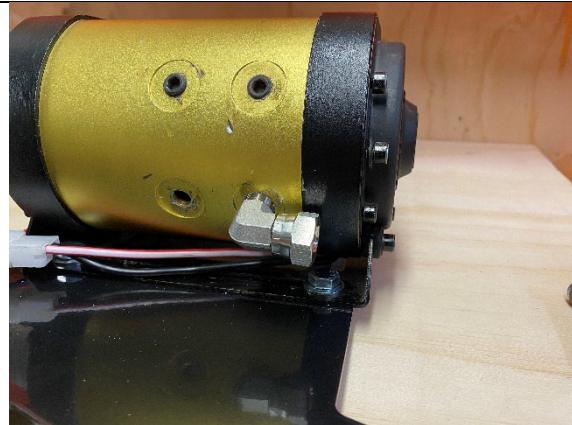

STEP 2.14 FIX FROM THE REAR USING THE TWO RE-ENFORCING STRAPS PROVIDED IN THE TJM COMPRESSOR THEN A WASHER AND NYLOC NUT ON EACH SET SCREW AS SHOWN.

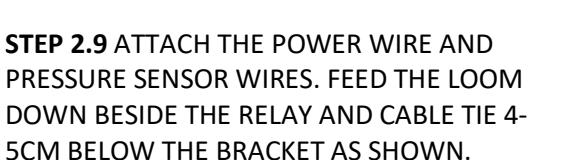

STEP 2.9 ATTACH THE POWER WIRE AND PRESSURE SENSOR WIRES. FEED THE LOOM DOWN BESIDE THE RELAY AND CABLE TIE 4-5CM BELOW THE BRACKET AS SHOWN.




STEP 2.10



INSTALLATION INSTRUCTIONS

JBA
FABRICATIONS

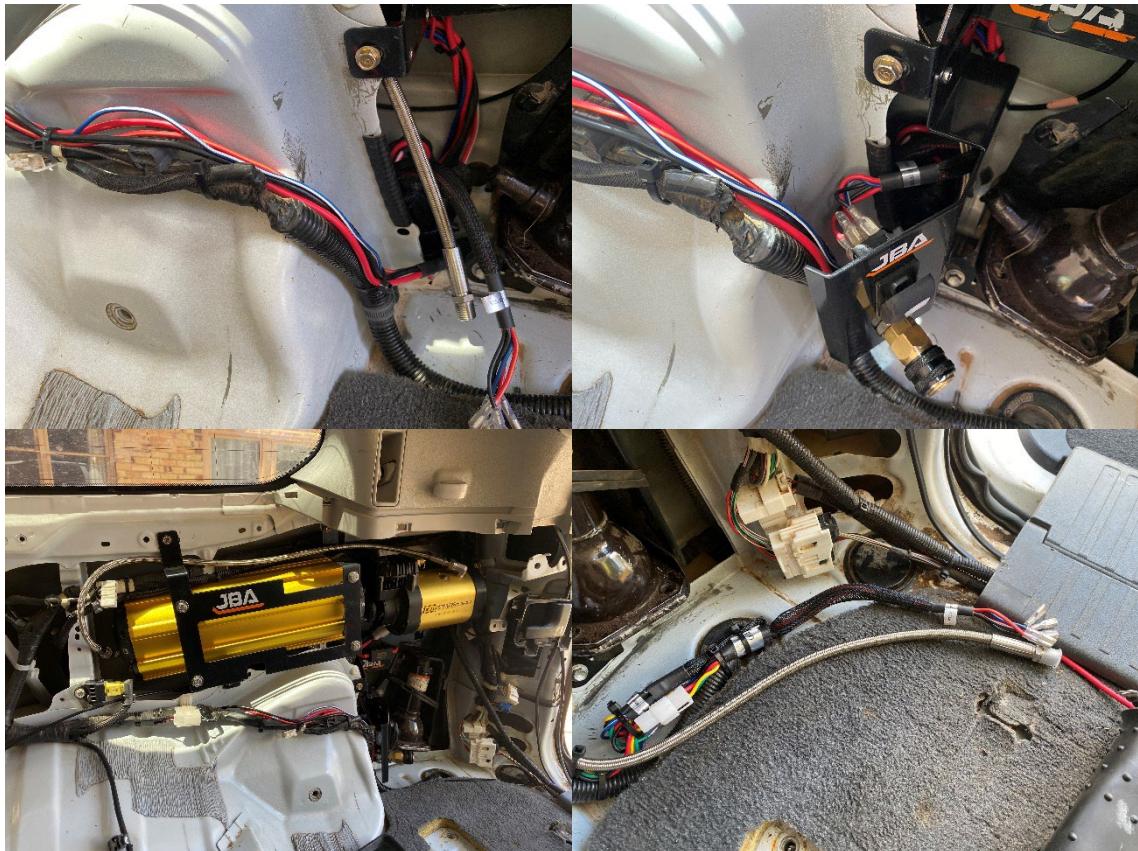

INSTALLATION INSTRUCTIONS

OPTIONAL STEP 2.1B INSTALLING SWITCH AND AIR OUTLET TO DRAWER FRONT



INSTALLATION INSTRUCTIONS

3. INSTALLING THE BRACKET AND COMPRESSOR INTO THE VEHICLE



STEP 3.1 REMOVE TOP SCREW FROM RIGHT HAND SIDE OF VEHICLE JACK AND KEEP ASIDE FOR NEXT STEP.




STEP 3.2 LIFT THE BRACKET INTO PLACE AND LOOSLEY REFIT THE TOP JACK SCREW REMOVED IN STEP 3.1 AND FIT SUPPLIED M6 X 20 SEMS ASSEMBLY BOTTOM LEFT AS SHOWN. DO NOT FULLY TIGHTEN AT THIS STAGE.



STEP 3.3 FIT THE TOP TWO SCREWS USING M6 X 20 SEMS ASSEMBLY AND M6 HEX SERR FLANGE NUT.



STEP 3.4 IT CAN BE EASIER TO FEED THE M6 HEX SERR FLANGE NUT IN FROM BEHIND FIRST, LINE UP CENTRALLY AND HAND SCREW M6 X 20 SEMS TO GET STARTED THEN FULLY TIGHTEN.

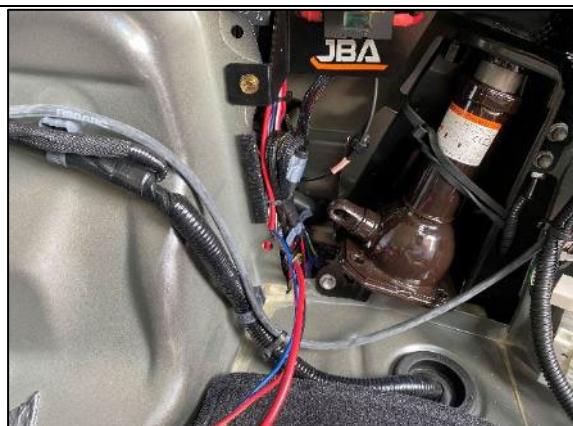

STEP 3.5 FEED THE WIRING LOOM NEATLY DOWN BESIDE THE JACK AS SHOWN. LEAVE 4 WIRES OUT FROM STEP 2.10 AND WIRE AS PER TJM COMPRESSOR INSTRUCTIONS.



STEP 3.6 FULLY TIGHTEN BOTTOM TWO SCREWS AND COMPLETE WIRING. TEST COMPRESSOR AND CHECK FOR ANY LEAKS. RE-ASSEMBLE VEHCLE AND WIPE DOWN.